


Sharpline™ #2010 Camaro® Rally Stripe Set Installation Instructions

Graphic Panel Layout Guide

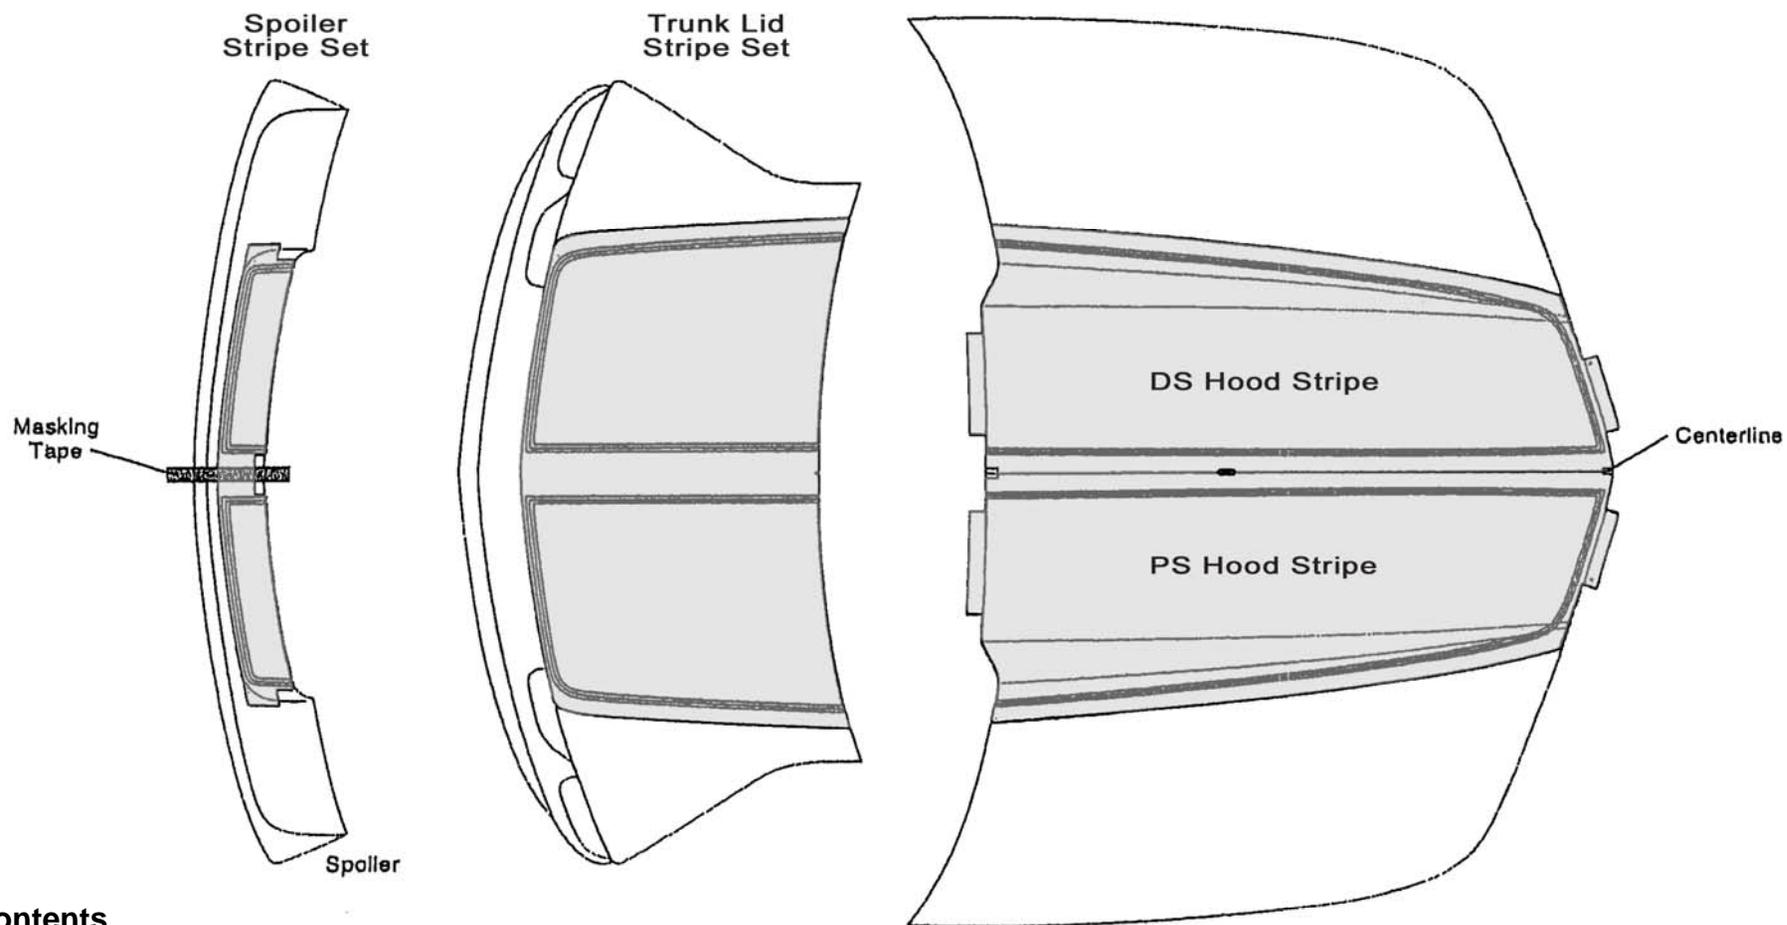

Kit Contents

- 1 – DS Hood Stripe
- 1 – PS Hood Stripe
- 1 – Trunk Lid Stripe Set
- 1 – Spoiler Stripe Set
- 1 – Squeegee

CAMARO® RALLY STRIPE KIT INSTALLATION INSTRUCTIONS

Preparation of Painted Surfaces for Automotive Application

This instruction sheet details specifically with automotive painted surface preparation for vinyl graphic products. Proper preparation of the application surface is essential to provide high quality, long lasting vinyl graphic and striping installations.

SURFACE PREPARATION

The vehicle surface must be properly prepared prior to installation of the graphics. All surfaces **MUST** be cleaned prior to any application of vinyl graphic/striping products. See the following steps:

1. For best results, the application should be made in temperatures ranging from 50 to 90 degrees Fahrenheit. Do not install graphics outdoors if winds exceed 10 mph. Blown dirt, dust or other contaminants can interfere with the bonding of the graphic adhesive to the vehicle during installation.
2. Wash the vehicle surface with detergent and water, then thoroughly rinse the surface with water and dry completely. **WARNING:** Do not use any aromatic solvents such as acetone, M.E.K., toluene, paint thinner; lacquer thinner, gasoline or ammonia-based cleaners to clean the vehicle surface.
3. Saturate a clean cloth with isopropyl alcohol and wipe the surface of the vehicle where the vinyl is to be applied to remove any contaminants such as silicone, wax, or adhesives.
4. Dry the surface with a lint free paper towel.

GRAPHIC INSTALLATION TOOLS REQUIRED

Isopropyl alcohol (70%) Grease Pencil Trigger-type spray bottle
Plastic squeegee 1 - Snappy™ knife, sharp razor blade or sharp scissors

It is also recommended you use ¾" masking tape for properly placing and installing your graphics.

WETTING SOLUTION REQUIRED

A wetting solution is required for best results in applying large vehicle graphics. Use standard 16 oz or 32 oz spray bottle and fill with tap water and 2 – 3 drops of baby Shampoo per 16 oz. Mix well. For easier application, use Sharpline's Easy On™ application solution. It can be mixed 50/50 with water in a standard spray bottle.

Stripe Alignment & Installation Procedures

Driver Side Hood Stripe

1. Find the centerline of the hood and use a grease pencil to mark this point at the front and rear of the hood panel.
2. Place the panel face-up on the driver side of the vehicle hood and align the edges to the front and rear edges of the hood and the centerline for proper registration. Use masking tape applied through the center of the graphic panel to secure in place.
3. Carefully pull back one half of the panel from the graphic liner. With the wetting solution, set the nozzle for a fine mist and thoroughly saturate the adhesive side of the exposed panel. Carefully trim the exposed liner paper and remove. Spray additional wetting solution on the hood and lay the exposed half of the graphic panel on the hood.
4. With a squeegee, use firm, overlapping strokes to install the exposed portion of the graphic panel. Squeegee from the center of the panel out to the edges of the panel.
5. Remove the masking tape and repeat steps 3 and 4 on the remaining half of the graphic panel.

Passenger Side Hood Stripe

1. Place panel face up on the passenger side of the vehicle hood and align the edges to the front and rear edges of the hood and the premask carrier from the Driver Side hood stripe you just installed. Use masking tape applied through the center of the graphic panel to secure in place.
2. Repeat Steps 2 through 5 of the Driver Side Hood Stripe instructions.
3. Carefully remove the premask carrier at 180 degrees to the vehicle surface on each hood stripe. Inspect for bubbles and/or poor adhesion along the edges of the stripes. If needed, pre-press the stripe into place and remove any bubbles with a pin or needle.

Trunk Lid Stripe Set Panel – for vehicles without a spoiler. If the vehicle has a spoiler, carefully remove it prior to installing the graphics.

1. Find the centerline of the trunk lid and use a grease pencil to mark this point at the front and rear of the trunk lid panel.
2. Place the trunk graphic panel face-up on the trunk lid and align the panel edges to the front and rear edges of the trunk. Use masking tape applied through the center of the graphic panel over the top and bottom of the trunk lid to secure in place.
3. Carefully pull back one half of the panel from the graphic liner. With the wetting solution, set the nozzle for a fine mist and thoroughly saturate the adhesive side of the exposed panel. Carefully trim the exposed liner paper and remove. Spray additional wetting solution on the trunk lid and lay the exposed half of the graphic panel on the trunk lid.
4. With a squeegee, use firm, overlapping strokes to install the exposed portion of the graphic panel. Squeegee from the center of the panel out to the edges of the panel.
5. Remove the masking tape and repeat steps 3 and 4 on the remaining half of the graphic panel.
6. Carefully remove the premask carrier at 180 degrees to the vehicle surface. Inspect for bubbles and/or poor adhesion along the edges of the stripes. If needed, pre-press the stripe into place and remove any bubbles with a pin or needle. Re-attach the spoiler (if applicable) after application.

Spoiler Stripe Set Panel

1. Align the spoiler stripe set to be installed with the trunk lid stripe set and place a strip of masking tape in the center of the stripe between the two stripe portions.
2. Carefully pull back one half of the panel from the graphic liner and trim the liner of this section from the stripe.
3. Firmly hold the edge of the stripe slightly above the surface of the spoiler and use the squeegee to press the stripe into place, beginning at the center and working toward the end.
4. Repeat Step 3 for the opposite side of the stripe set. Carefully remove the premask carrier at 180 degrees to the spoiler surface.
5. Slowly roll the remaining front edge of the stripe set around the leading edge of the spoiler, firmly pressing the stripe onto the spoiler's bottom side. Use a squeegee if needed. Note: If the stripe has difficulty adhering, use a hair dryer to warm and soften the stripe. This will allow the stripe to become more conformable. Inspect for bubbles and/or poor adhesion along the edges of the stripes. If needed, pre-press the stripe into place and remove any bubbles with a pin or needle.