

## 2012 – CAMARO VENT STRIPE™ KIT INSTALLATION INSTRUCTIONS

*Preparation of Painted Surfaces for Automotive Application*

This instruction sheet details specifically with automotive painted surface preparation for vinyl graphic products. Proper preparation of the application surface is essential to provide high quality, long lasting vinyl graphic and striping installations.

### SURFACE PREPARATION

The vehicle surface must be properly prepared prior to installation of the graphics. All surfaces **MUST** be cleaned prior to any application of vinyl graphic/striping products. See the following steps:

1. For best results, the application should be made in temperatures ranging from 50 to 90 degrees Fahrenheit. Do not install graphics outdoors if winds exceed 10 mph. Blown dirt, dust or other contaminants can interfere with the bonding of the graphic adhesive to the vehicle during installation.
2. Wash the vehicle surface with detergent and water, then thoroughly rinse the surface with water and dry completely. **WARNING:** Do not use any aromatic solvents such as acetone, M.E.K., toluene, paint thinner; lacquer thinner, gasoline or ammonia-based cleaners to clean the vehicle surface.
3. Saturate a clean cloth with isopropyl alcohol and wipe the surface of the vehicle where the vinyl is to be applied to remove any contaminants such as silicone, wax, or adhesives.
4. Dry the surface with a lint free paper towel.

### GRAPHIC INSTALLATION TOOLS REQUIRED


Prior to installation, be sure to use the following tools:

- 1 – squeegee                      1 - Snappy™ knife or sharp razor blade

It is also recommended you use ¾" masking tape for properly placing and installing your graphics.

### PACKAGE CONTENTS

*Camaro Vent Stripe Kit contains 1 set of graphic components for each side.*

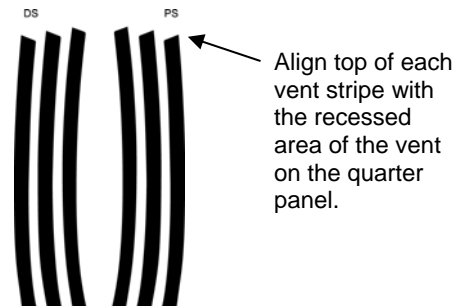

### PANEL INSTALLATION

*The graphic package you are about to install is designed for superior durability and requires little maintenance. Please follow the steps below to get the best performance from your graphic package.*

1. Cut the decal sheet apart to separate the Driver Side vent stripes from the Passenger Side vent stripes. Start with the Driver Side vent stripes and carefully trim apart each of the three graphics.
2. The vent stripes should be installed in the order in which they appear on the decal sheet. Take the first vent stripe and peel the paper liner away from the decal. Carefully align the top of the first vent stripe with the corresponding vent recess on the quarter panel and lightly tack down into position with your finger. (See photo)
3. Then use your finger to guide the placement of the remainder of the stripe into the recessed area. Carefully lift and reposition the stripe as needed until you are satisfied with its placement.
4. Use the squeegee and carefully squeegee the stripe firmly onto the vehicle surface. Then peel the masking back at a 180 degree angle to the surface. If a bubble occurs, carefully pop it with a pin and work the air out.
5. Repeat Steps 2 – 4 for the other vent stripes on the Driver Side.
6. Repeat the installation process on the Passenger Side of the vehicle.



## PLACEMENT OF GRAPHICS *Graphics in photos are for demo purposes & do not match the graphics in this package.*



1. Using your knife or razor blade, carefully cut the component graphics apart from each sheet, if necessary.



2. Tape the component graphic panels onto the side of vehicle to determine exactly where you want the graphic panels installed. Apply a strip of tape vertically through the center of each component and lightly tape each end of the graphic panel to the vehicle.



3. Remove the positioning tape on either side of the center hinge from the first panel and peel the liner paper away from this portion of the graphic. Lightly tape the graphic to the vehicle surface (as illustrated in Step 4).




4. Temporarily secure the end of the graphic to the vehicle surface and cut the backing paper off near the center hinge.



5. Lift the edge of the graphic from the vehicle surface and use the squeegee to rub the graphic into place using short, overlapping strokes from the center of the graphic to the end. By holding one end of the graphic off the vehicle surface as you squeegee, you will prevent air from becoming trapped underneath the graphic's surface.



6. Remove the tape hinge from the center of the graphic. Remove the remaining backing paper, spray applications solution on the application surface and squeegee the remaining half of the panel onto the vehicle using the same method as outlined in Step 5.

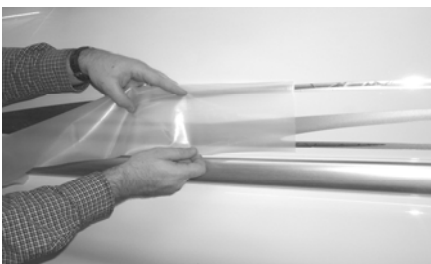

7. Remove the clear transfer masking by pulling it back at a 180-degree angle from the vehicle surface in a smooth steady motion.



8. If any small bubbles appear during installation, they can be removed by pricking the base of the bubble with the knife blade and squeezing the trapped air out with the tip of your finger.



9. Trim away excess graphic material from door edges by inserting the knife along the edge of the opening at a 45-degree angle. Then carefully cut through the vinyl on both sides of the seam and remove the scrap.

10. Repeat steps 3 through 9 on the other side of the vehicle.

### LIMITED WARRANTY

Since a wide variety of surfaces exist, no guarantee is expressed or implied as to removability or damage to the application surface. Any material shown to be defective to Sharpline Converting, Inc. will carry a warranty limited to product replacement only.